

Interface USB-To-Serial Comm Port for LPG/CNG Segquential Gas Injection System Akme and Bingo systems

User's manual

1. System requirement

- Computer system requirement IBM PC/AT or compatible desktop with USB port.
- Operation system requirement: Windows 98 SE/ Windows 2000/ Windows XP
- No external power is required, powered by USB bus directly.

2. Driver Installation

- Be sure your computer support USB port.
- Be sure that USB ports work correctly.
- Do not plug in USB interface before driver installation.
- Startup Windows operation system, then insert the driver disk into CD-ROM or run file.
- Install driver: PL-2303 Driver Installer.exe file.
- After installation reset operation system.
- Plug USB interface into USB port of the komputer. The system will setup the driver automatically.
- After that, you will find a new COM port on Device Manager (Start/Control Panel/Hardware/Device Manager/Ports (COM&LPT)). It is named: Prolific USB-To-Serial Comm Port (COM _).

